

2.3"/3.8" Width


WALL MOUNT

LED


ARCHITECTURAL LED LUMINAIRE INSTALLATION INSTRUCTIONS

⚠ RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


3.8" Width Linear

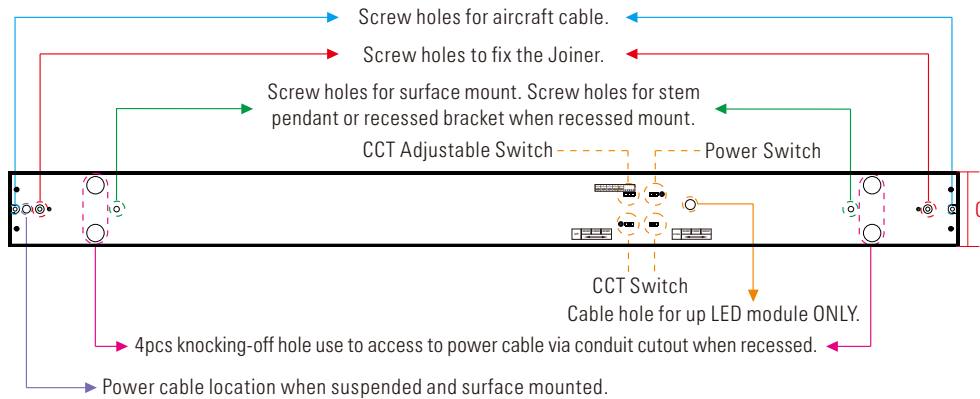

2.3" Width Linear - 1

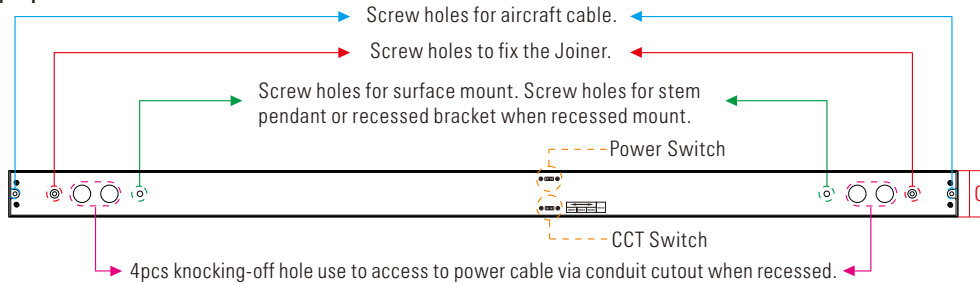

2.3" Width Linear - 2

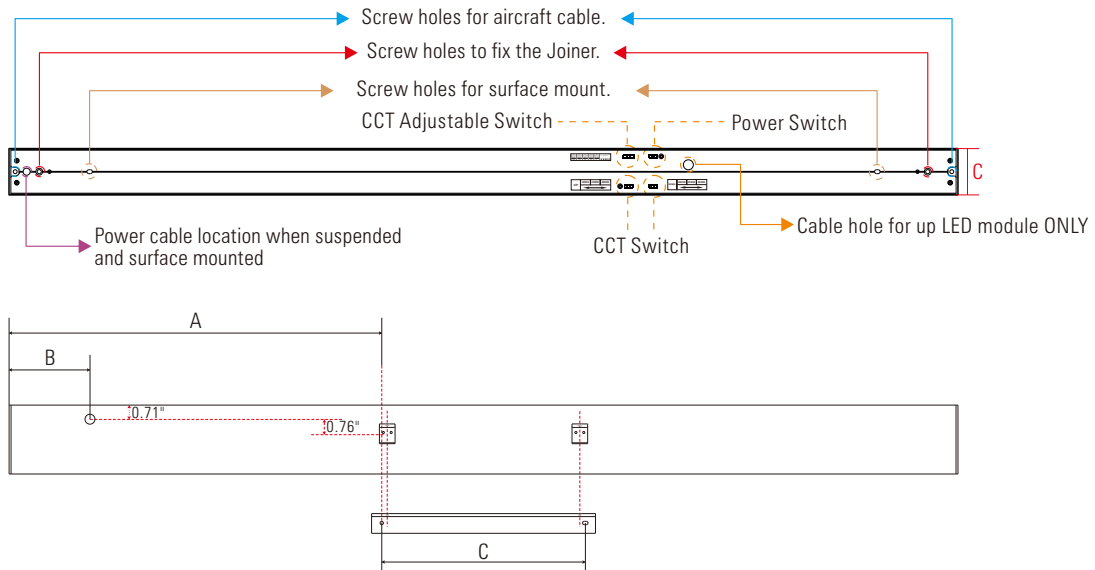

	3.8" Width Linear			2.3" Width Linear - Version 2			2.3" Width Linear - Version 1		
Nominal Length	"A"	"B"	"C"	"A"	"B"	"C"	"A"	"B"	"C"
	Inch	Inch	Inch	Inch	Inch	Inch	Inch	Inch	Inch
2FT	6.73"	4.07"	10.24"	6.73"	4.07"	10.24"	6.73"	4.07"	10.24"
3FT	12.74"	4.07"	10.24"	12.74"	4.07"	10.24"	12.74"	4.07"	10.24"
4FT	18.74"	4.07"	10.24"	18.74"	4.07"	10.24"	18.74"	4.07"	10.24"
8FT	42.50"	4.07"	10.24"	42.50"	4.07"	10.24"	42.50"	4.07"	10.24"



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


IMPORTANT

1. Read all instructions.
2. Install in accordance with national and local electrical code regulations.
3. This product is intended to be installed and serviced by a qualified, licensed electrician.
4. Do not install in wet locations. For dry and damp use only.
5. Turn off electrical power before installing or servicing fixture in any way.
6. To reduce the risk of fire and overheating, make sure all connections are tight.
7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.
8. The maximum connection of each input line is 40FT in 120AC, 80FT in 230AC, 100FT in 277AC.

ACCESSORY




Wire Nut




Square Plate

Noted: Square plate Compatible for 4" octagon, 4" round, 4" square and 2x4" rectangle junction boxes.




Anchor




Screw



Screw



Screw



Wall Mounting Bracket



Butterfly Drywall Anchor

WIRING

CORD / SUPPLY WIRING	LUMINAIRE	
	LINE	LINE-BLACK
	GREEN	GROUND-GREEN
	NEUTRAL	NEUTRAL-WHITE
	DIM (+) VIOLET	VIOLET
CORD / SUPPLY WIRING	DIM (-) PINK	PINK

CORD / SUPPLY WIRING	LUMINAIRE (With emergency function)	
	LINE	LINE-BLACK
	OPTIONAL SWITCH	LINE-RED
	GREEN	GROUND-GREEN
	NEUTRAL	NEUTRAL-WHITE
CORD / SUPPLY WIRING	DIM (+) VIOLET	VIOLET
	DIM (-) PINK	PINK




Please isolate two dimming wires by P2 terminal individually if no need dimming;
MUST connect wires with corresponding colors as shown.

INDEPENDENT INSTALLATION

Nominal Length	3.8" Width Linear			2.3" Width Linear - Version 2			2.3" Width Linear - Version 1		
	"a"	"b"	"c"	"a"	"b"	"c"	"a"	"b"	"c"
	Feet	Feet	Feet	Feet	Feet	Feet	Feet	Feet	Feet
2FT	0.34'	0.22'	0.85'	0.34'	0.22'	0.85'	0.34'	0.22'	0.85'
3FT	0.34'	0.72'	0.85'	0.34'	0.72'	0.85'	0.34'	0.72'	0.85'
4FT	0.34'	1.22'	0.85'	0.34'	1.22'	0.85'	0.34'	1.22'	0.85'
8FT	0.34'	3.20'	0.85'	0.34'	3.20'	0.85'	0.34'	3.20'	0.85'


1 Assemble Power Cord

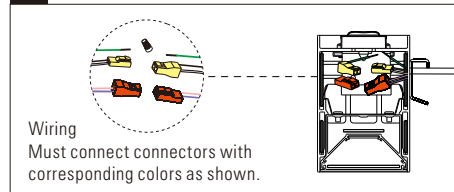


Take off the end cap and LED modular, thread the power cord out of the housing as shown. Wiring and then remount LED modular and end cap.

(The green ground wire is connected with a wire nut. Insert the yellow male and female to connect the black and white AC wire. Insert the orange male female to connect the violet, pink dimming wires.)

2 Install mounting point on wall

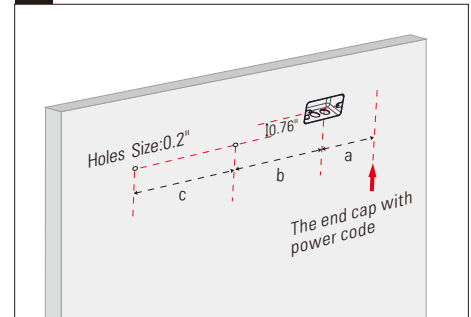

3 Install plate and bracket

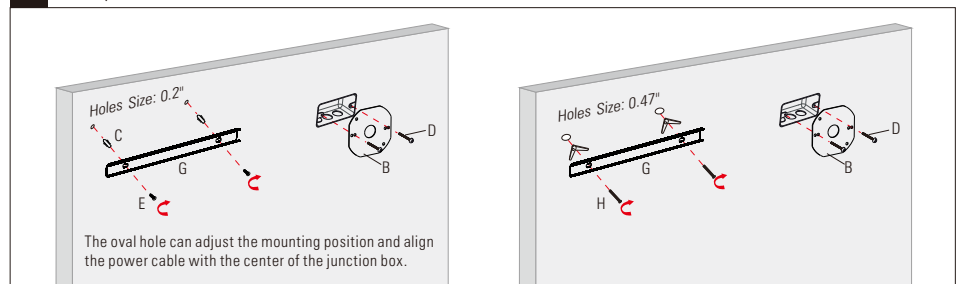


3-1: Insert Anchor "C" into hole and fix the wall mounting bracket "G" with screw "E".

Remark: You can also fix the wall mounting bracket "G" with butterfly drywall anchor "H".

3-2: Mount the square cover plate "B" onto J-box with screw "D", then plastering.


4 Wiring

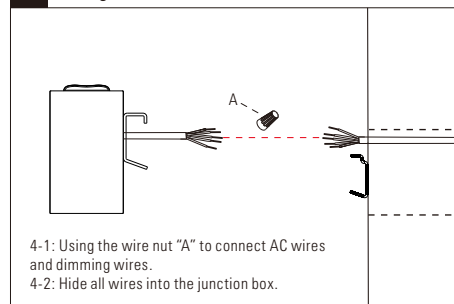


4-1: Using the wire nut "A" to connect AC wires and dimming wires.

4-2: Hide all wires into the junction box.

5 Mounting

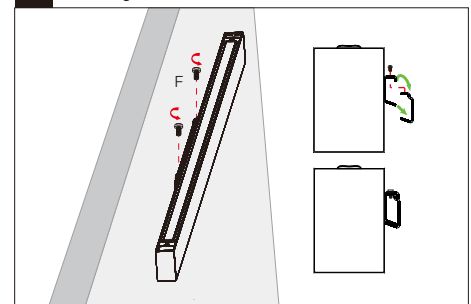

6 Complete

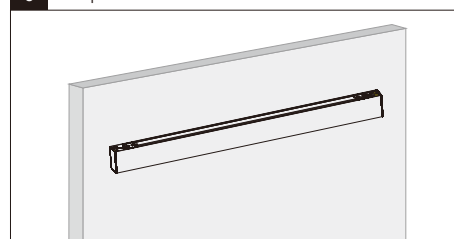

⚠ RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

ACCESSORY



"—" Joiner

BEFORE CONNECTING


DISASSEMBLE LUMINAIRES



Start of run (SoR): Remove the end cap without power code, insert the joiner and fix it with screw.



Middle of run (MoR): Remove both end caps, insert the joiner and fix it with screw.




End of run (EoR): Remove the end cap with power code, insert the joiner and fix it with screw.


MULTIPLE LUMINAIRES CONNECTION

	3.8" Width Linear			2.3" Width Linear - Version 2			2.3" Width Linear - Version 1		
Nominal Length	"a"	"b"	"c"	"a"	"b"	"c"	"a"	"b"	"c"
Feet	Feet	Feet	Feet	Feet	Feet	Feet	Feet	Feet	Feet
2FT	0.34'	0.22'	0.85'	0.34'	0.22'	0.85'	0.34'	0.22'	0.85'
3FT	0.34'	0.72'	0.85'	0.34'	0.72'	0.85'	0.34'	0.72'	0.85'
4FT	0.34'	1.22'	0.85'	0.34'	1.22'	0.85'	0.34'	1.22'	0.85'
8FT	0.34'	3.20'	0.85'	0.34'	3.20'	0.85'	0.34'	3.20'	0.85'


1 Install mounting point on wall

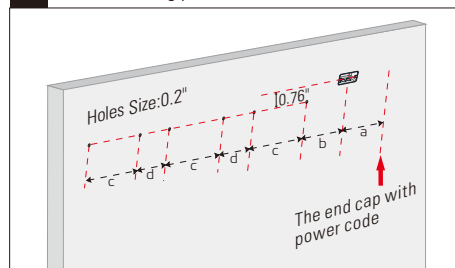

2 Install plate and bracket from SoR to EoR

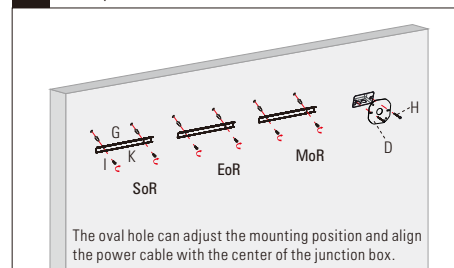


3 Wiring -SoR

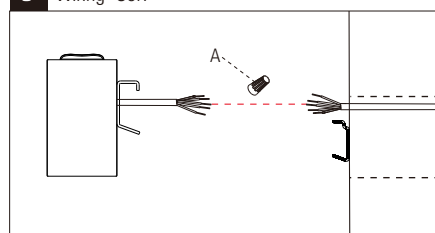


3-1: Using the wire nut "A" to connect AC wires and dimming wires.
3-2: Hide all wires into the junction box.


4 Mounting

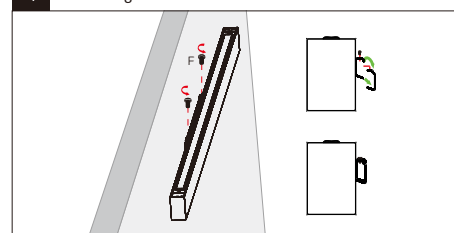

5 Repeat install and join steps - MoR to EoR

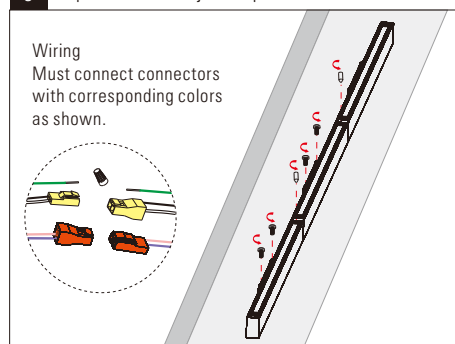

6 Complete

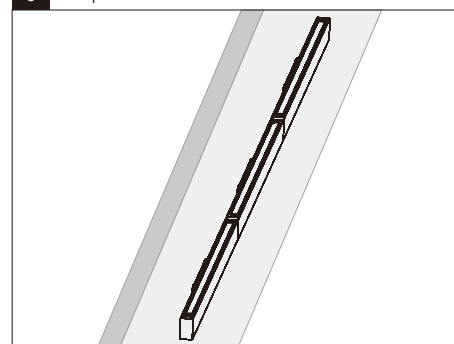

Optional 40' Diffuser Lens Roll

