




MUST BE INSTALLED PRIOR TO DRYWALL/CEILING INSTALLATION. READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.
DO NOT APPLY WEIGHT OR LOAD TO THE LUMINAIRE.

BEFORE YOU BEGIN


- Luminaires must be installed by a qualified electrician (Check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately Contractor is responsible for adequately fixture weight.

SHOCK HAZARD


May result in serious injury or death.
Turn power OFF at circuit breaker prior to installation or servicing.

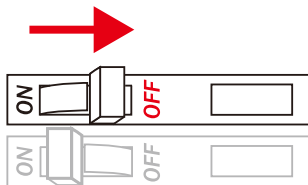**COMPONENT KEY**


LED Perimeter Luminaire

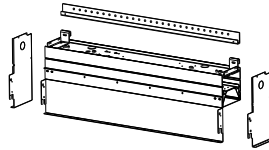


1FT/2FT/3FT + 1 FT Telescoping Section (Optional)

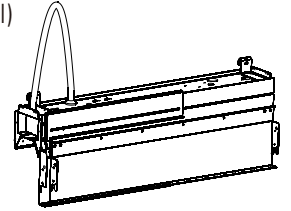


Inside Corner(Optional)

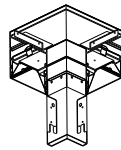


Outside Corner(Optional)

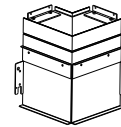**HARDWARE BAG LIST**


TB3X5 Screw: 1FT Telescoping section, baffle plate and end caps to housing.
ST3.7x21 Screw: Mounting bracket, grid plate, baffle plate to dry ceiling.

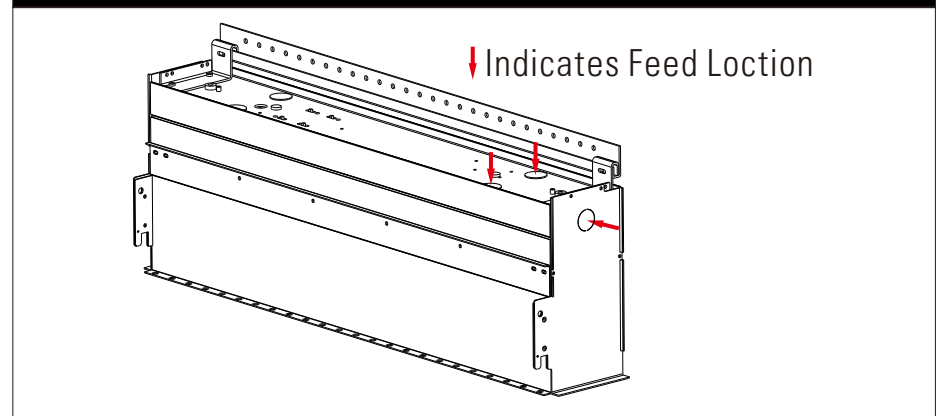**FEED LOCATIONS**


2.3" Width Version(Regressed Version)

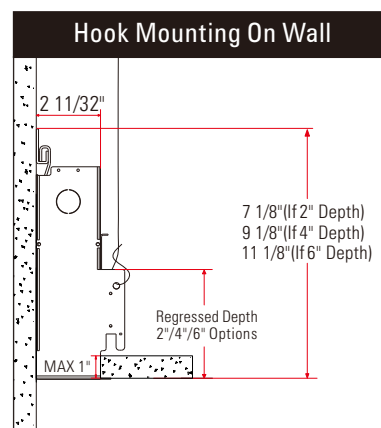


3.8" Width Version(Regressed Version)

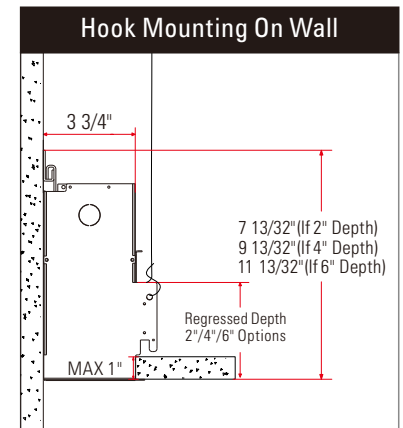**CEILING TYPE**


15/16" T-Grid




9/16" T-Grid




9/16" Slot Grid




Drywall Trimless

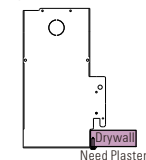

Drywall Trim

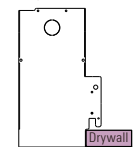

Drywall Trim

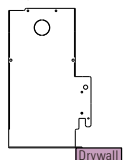



MUST BE INSTALLED PRIOR TO DRYWALL/CEILING INSTALLATION. READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.
DO NOT APPLY WEIGHT OR LOAD TO THE LUMINAIRE.




HOW TO MOUNT THE LIGHT ON WALL?

1


Start Of Runs

Middle Of Runs


End Of Runs

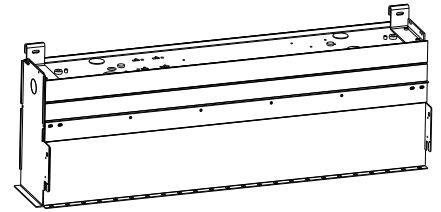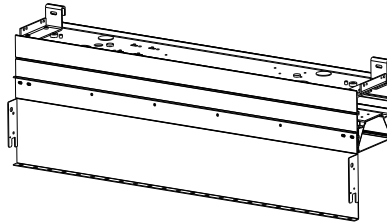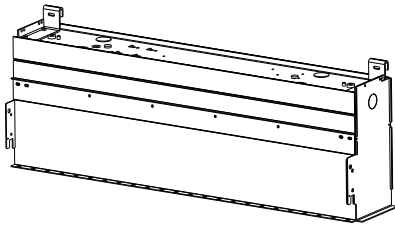


2

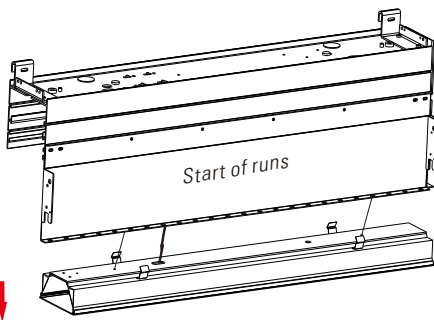


3

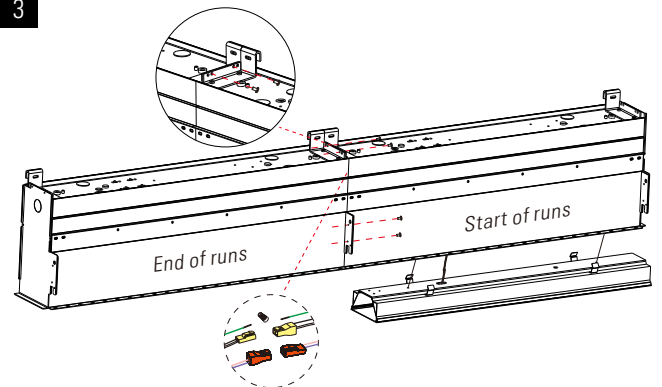


4

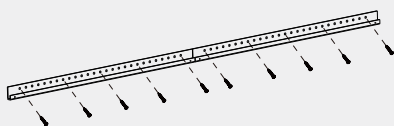

5


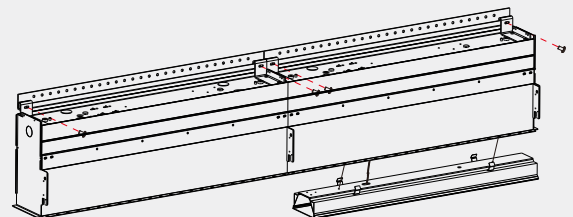


6

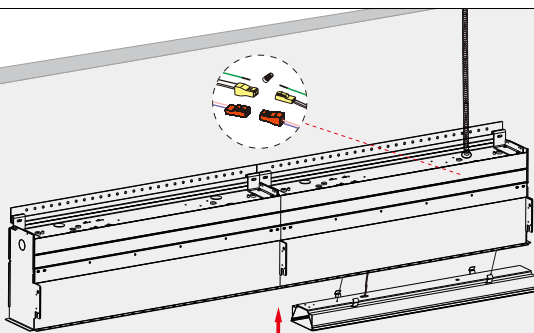



MUST BE INSTALLED PRIOR TO DRYWALL/CEILING INSTALLATION. READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.
DO NOT APPLY WEIGHT OR LOAD TO THE LUMINAIRE.

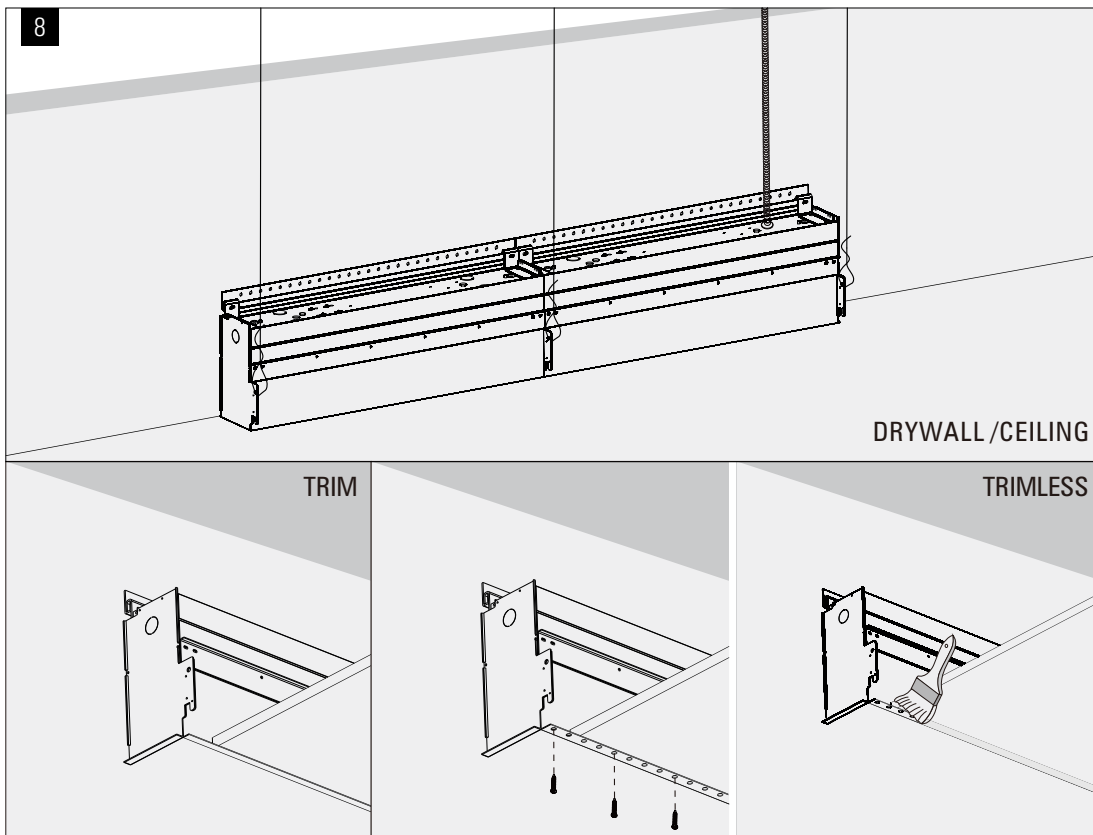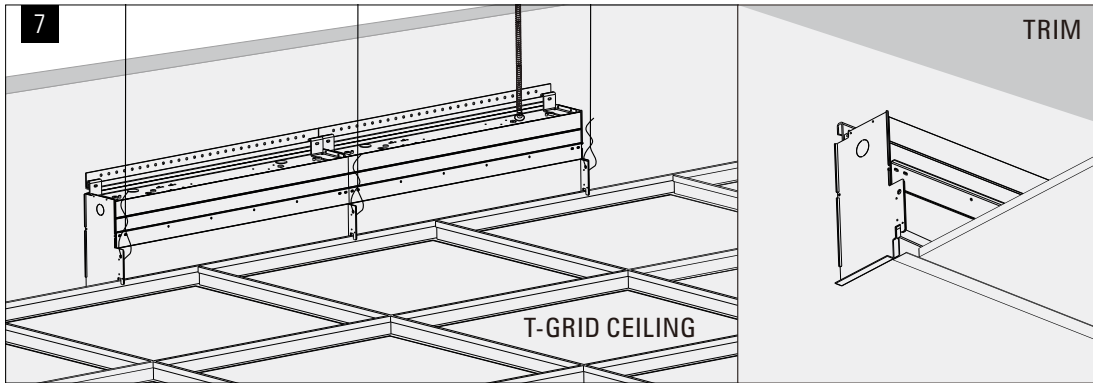





MUST BE INSTALLED PRIOR TO DRYWALL/CEILING INSTALLATION. READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.
DO NOT APPLY WEIGHT OR LOAD TO THE LUMINAIRE.

HOW TO INSTALL THE LUMINAIRE + 1FT TELESCOPING SECTION ON WALL?

Luminaire + 1FT Telescoping Section

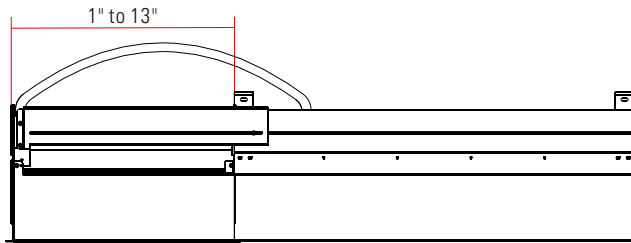


1

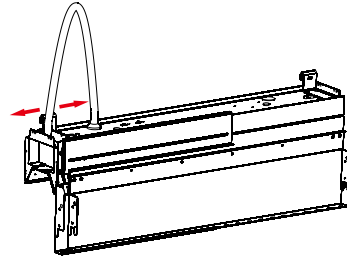


2


L = The measured length of the luminaire that needs to be installed

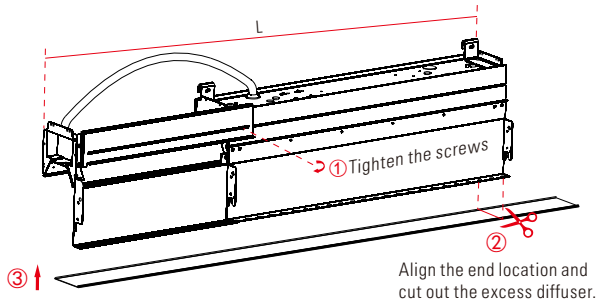


3

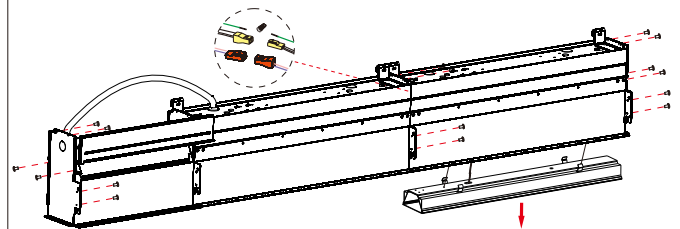

4

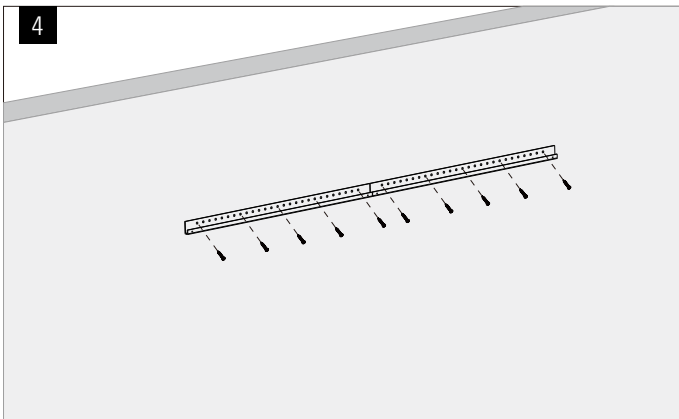


5

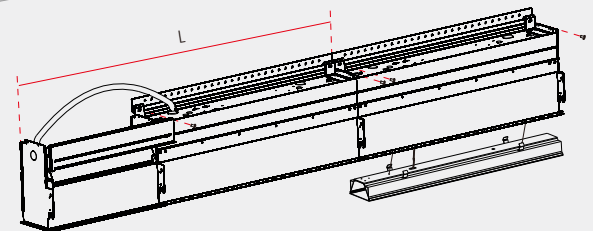


L = The measured length of the luminaire that needs to be installed

6

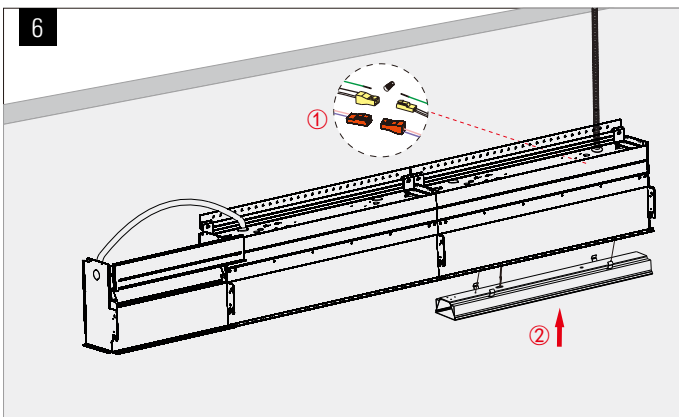

7


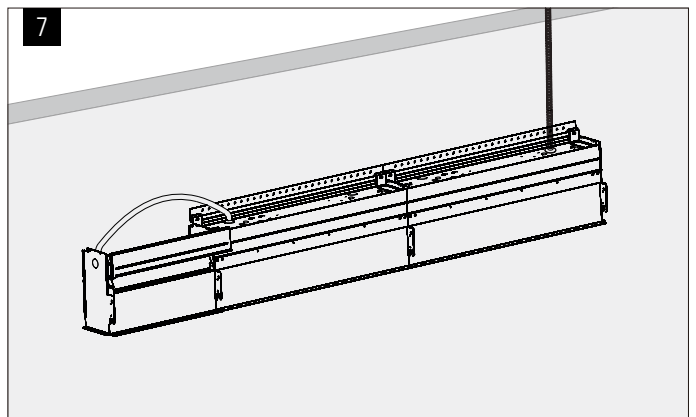


WALL MOUNT REGRESSED PERIMETER LED

2.3" OR 3.8" WIDTH LED PERIMETER LIGHTING INSTALLATION INSTRUCTIONS



MUST BE INSTALLED PRIOR TO DRYWALL/CEILING INSTALLATION. READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.
DO NOT APPLY WEIGHT OR LOAD TO THE LUMINAIRE.

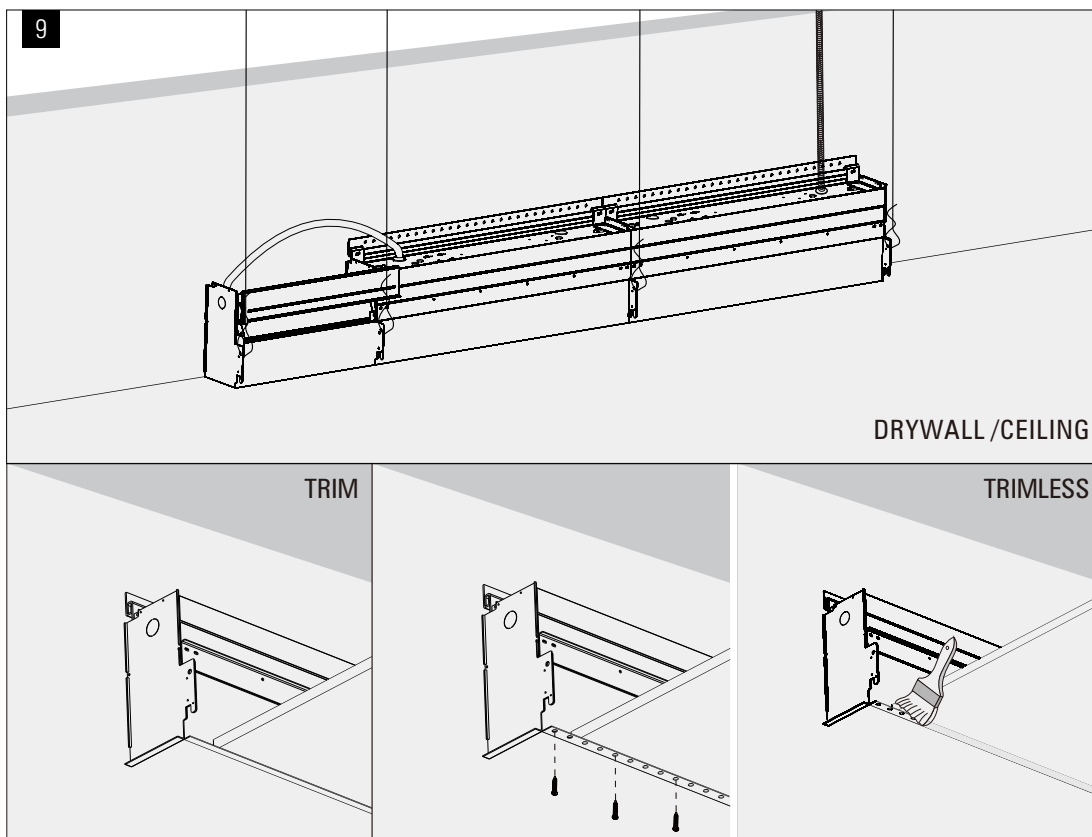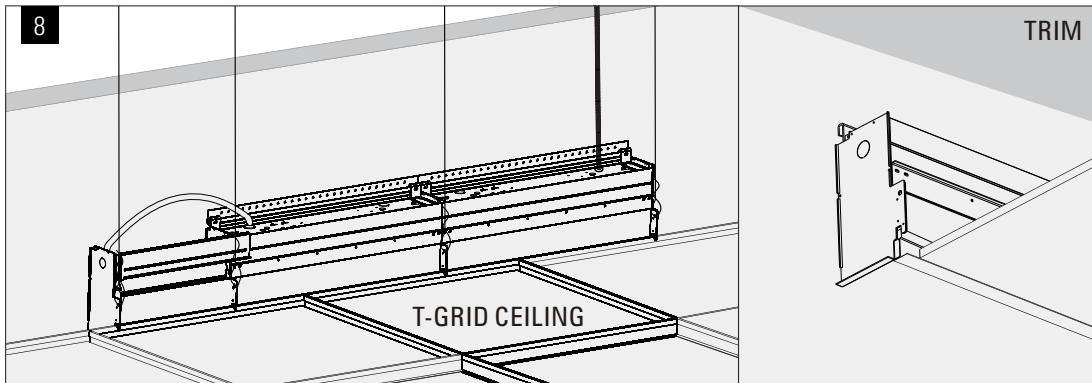

WALL MOUNT REGRESSED PERIMETER LED

2.3" OR 3.8" WIDTH LED PERIMETER LIGHTING INSTALLATION INSTRUCTIONS




MUST BE INSTALLED PRIOR TO DRYWALL/CEILING INSTALLATION. READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.
DO NOT APPLY WEIGHT OR LOAD TO THE LUMINAIRE.


HOW TO INSTALL THE INSIDE CORNER ON WALL?

INSIDE CORNER


1

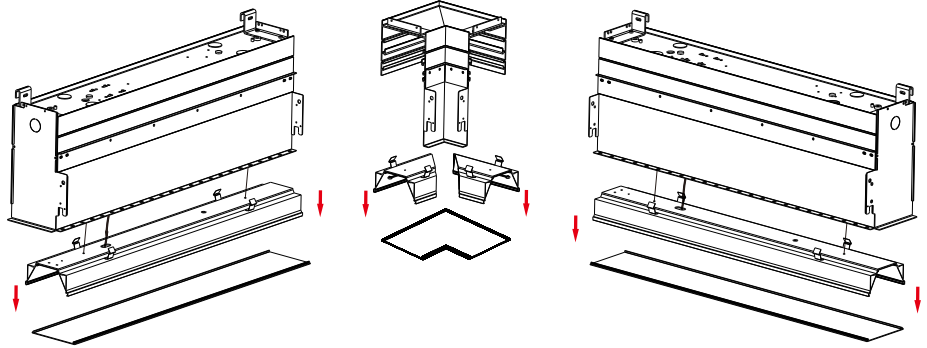


2

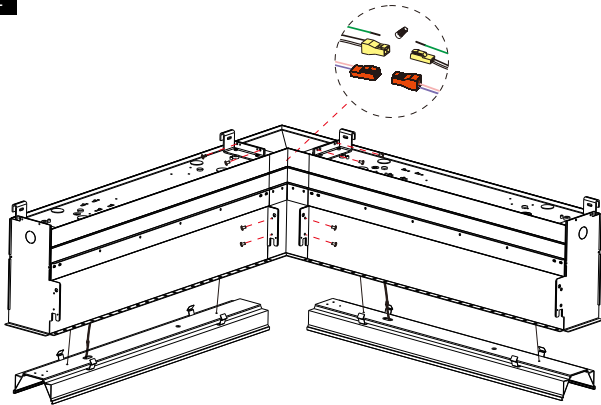


3

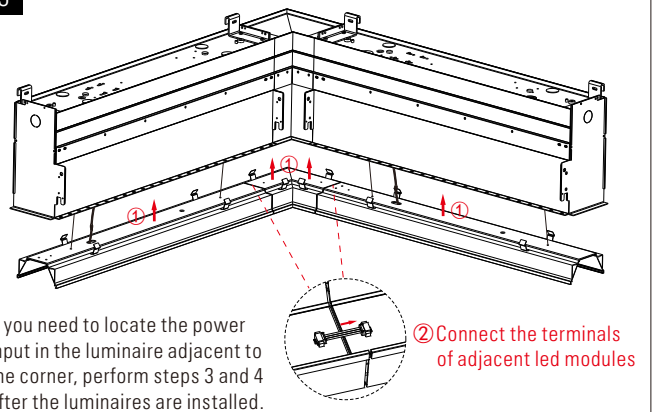


4

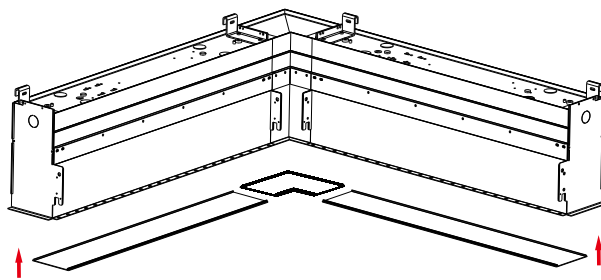


5

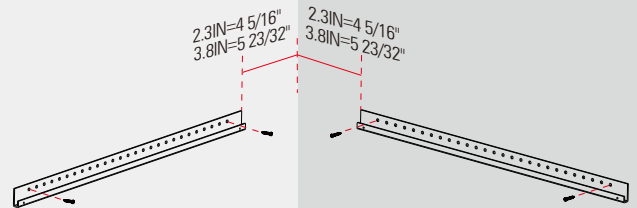

6

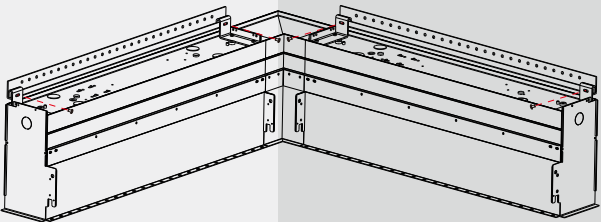

7

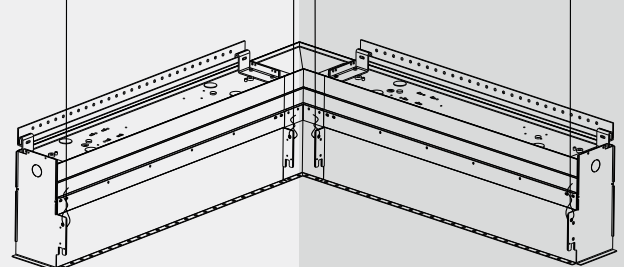





MUST BE INSTALLED PRIOR TO DRYWALL/CEILING INSTALLATION. READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.
DO NOT APPLY WEIGHT OR LOAD TO THE LUMINAIRE.

HOW TO INSTALL THE OUTSIDE CORNER ON WALL?


OUTSIDE CORNER

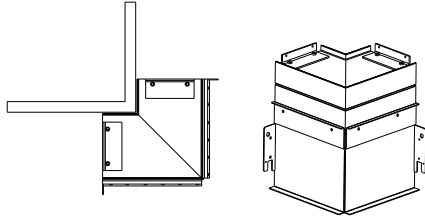


1

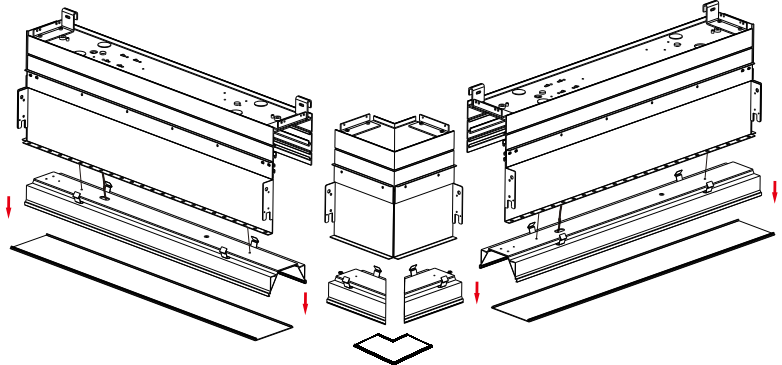

2

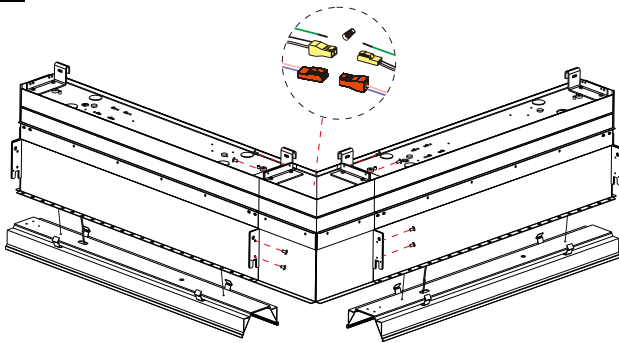


3

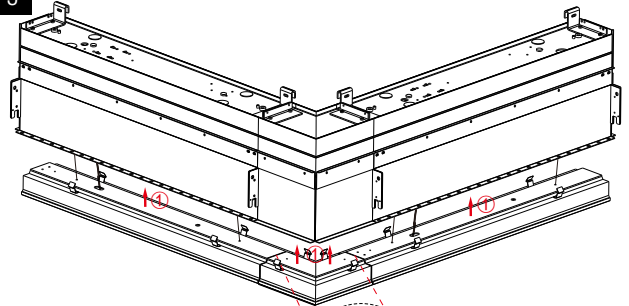


If you need to locate the power input in the luminaire adjacent to the corner, perform steps 3 and 4 after the luminaires are installed.


② Connect the terminals of adjacent led modules




4

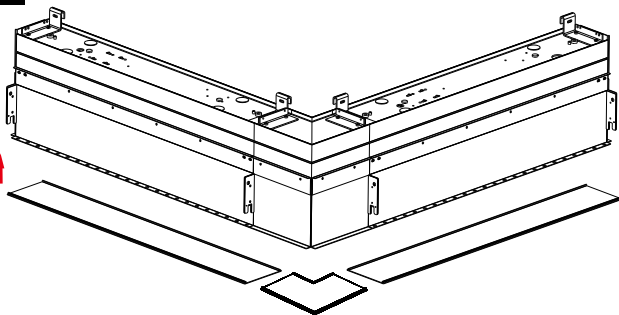

5

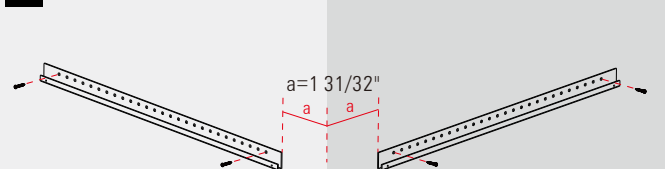

6

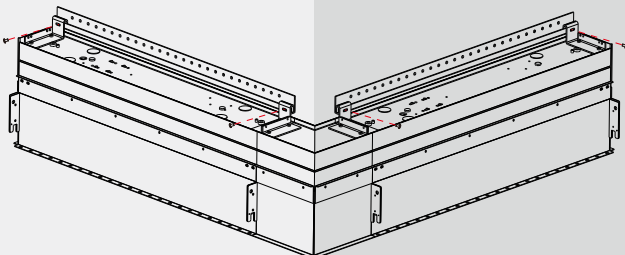

7

