



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


IMPORTANT

1. Read all instructions.
2. Install in accordance with national and local electrical code regulations.
3. This product is intended to be installed and serviced by a qualified, licensed electrician.
4. Do not install in wet locations. For dry and damp use only.
5. Turn off electrical power before installing or servicing fixture in any way.
6. To reduce the risk of fire and overheating, make sure all connections are tight.
7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.

SHOCK HAZARD



May result in serious injury or death. Turn power OFF at circuit breaker prior to installation or servicing.

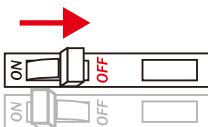

WIRING


CORD / SUPPLY WIRING

LUMINAIRE	
LINE	LINE- BLACK
GREEN	GROUND-GREEN
NEUTRAL	NEUTRAL- WHITE
DIM (+) VIOLET	VIOLET
DIM (-) PINK	PINK




Please isolate two dimming wires by P2 terminal individually if no need dimming; MUST connect wires with corresponding colors as shown.

Installation Effect Diagrams:

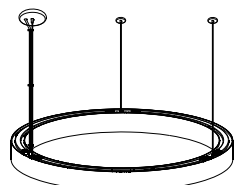

Pendant-Separate 3 Anchor Points
Page 2: Dry Ceiling
Page 3: Drop Ceiling

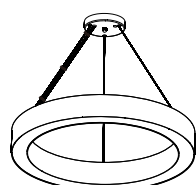


Pendant-Central Canopy Convergence
Page 5: Dry Ceiling
Page 6: Drop Ceiling



Surface Mount
Page 8


2FT Aperture Fixture:

*View from Above

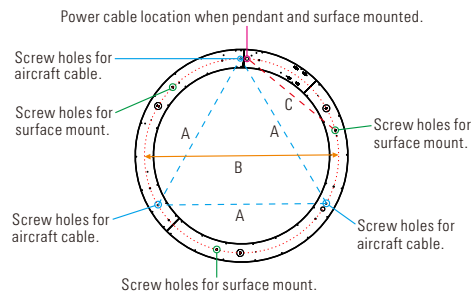

3FT / 4FT Aperture Fixture:

*View from Above

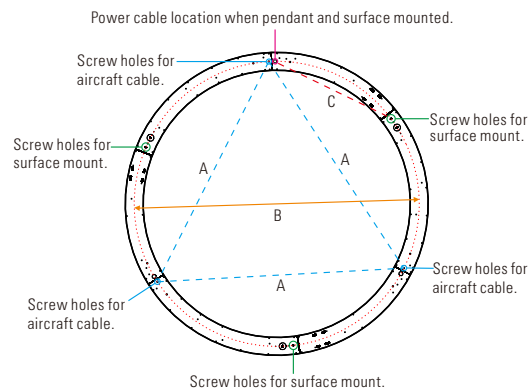


Aperture	A	B	C
Feet	Feet	Feet	Feet
2ft fixture	1.73'	2.00'	1.17'
3ft fixture	2.60'	3.00'	1.36'
4ft fixture	3.25'	3.76'	1.56'




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

PENDANT- SEPARATE 3 ANCHOR POINTS DRY CEILING

POWER FEED

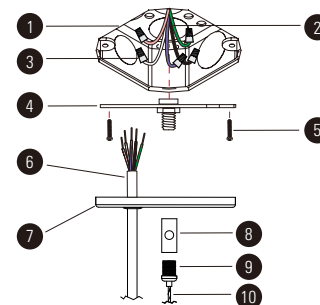


NON POWER SUSPENSION

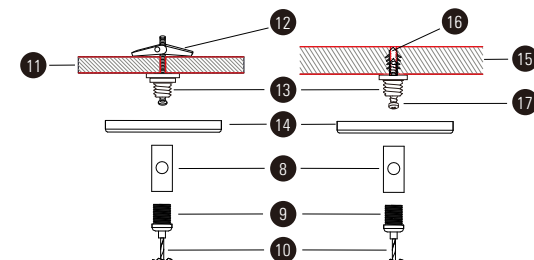


PARTS LIST


- 1 Junction Box (By Others)
- 2 AC Input (By Others)
- 3 Wire Nut
- 4 Junction Box Crossbar
- 5 Screw PM4*22
- 6 Power Cord
- 7 4.5" Canopy Power Feed
- 8 Cable Holder
- 9 Strain Relief Thread Nut
- 10 Aircraft Cable
- 11 Drywall Ceiling (By Others)
- 12 Butterfly Drywall Anchor
- 13 Crimp Stud
- 14 1.6" Canopy
- 15 Solid Ceiling (By Others)
- 16 Anchor
- 17 Screw PA4*30

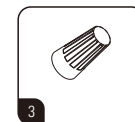


Wire Nut

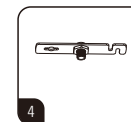


Junction Box Crossbar

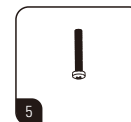


Screw PM4*22

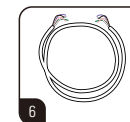


Power Cord

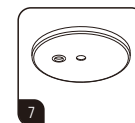


4.5" Canopy Power Feed

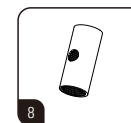


Cable Holder

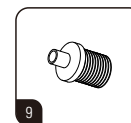


Strain Relief Thread Nut

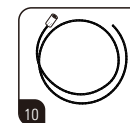


Aircraft Cable

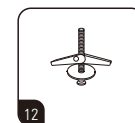


Butterfly Drywall Anchor

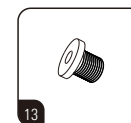


Crimp Stud

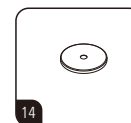

1.6" Canopy

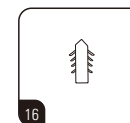

Anchor

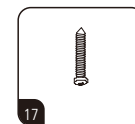



Screw PA4*30




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

PENDANT- SEPARATE 3 ANCHOR POINTS DROP CEILING

► POWER FEED

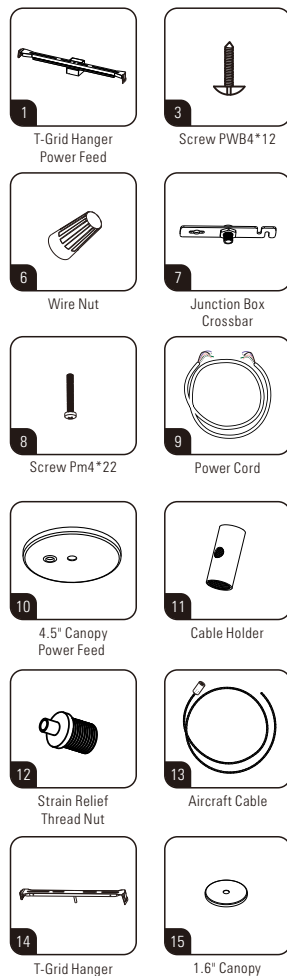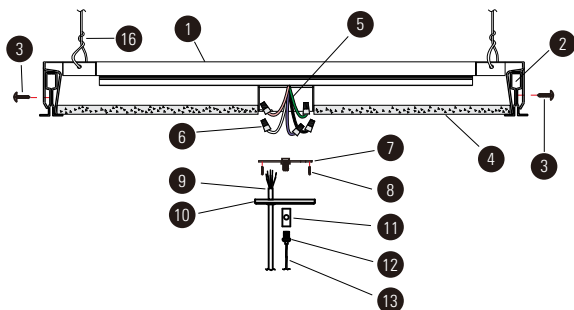

► NON POWER SUSPENSION

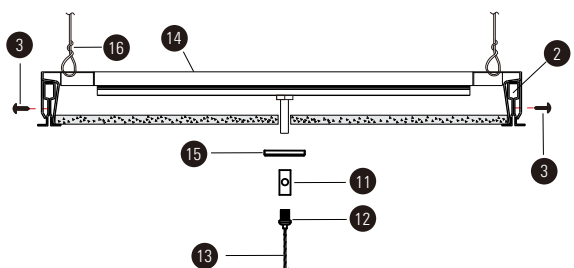

► PARTS LIST


- 1 T-Grid Hanger Power Feed
- 2 T-grid (By Others)
- 3 Screw PWB4*12
- 4 Ceiling Tile (By Others)
- 5 AC Input (By Others)
- 6 Wire Nut
- 7 Junction Box Crossbar
- 8 Screw PM4*22
- 9 Power Cord
- 10 4.5" Canopy Power Feed
- 11 Cable Holder
- 12 Strain Relief Thread Nut
- 13 Aircraft Cable
- 14 T-Grid Hanger
- 15 1.6" Canopy
- 16 Support wire to structure (By Others)




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

PENDANT- SEPARATE 3 ANCHOR POINTS

1 Hang Luminaire

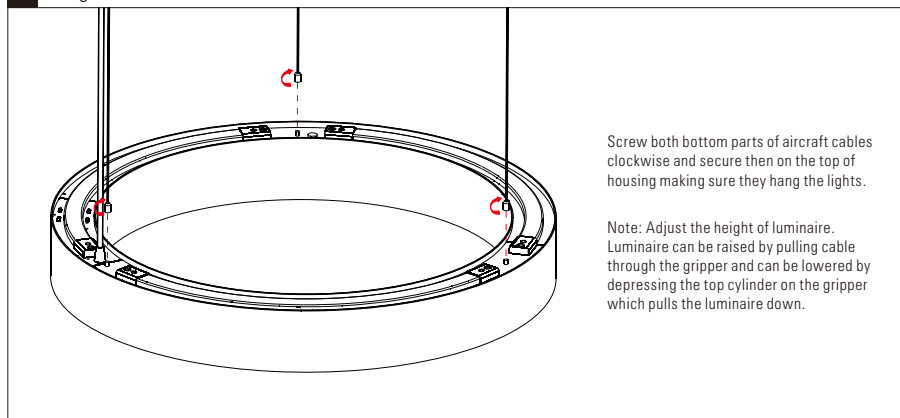


2 Complete

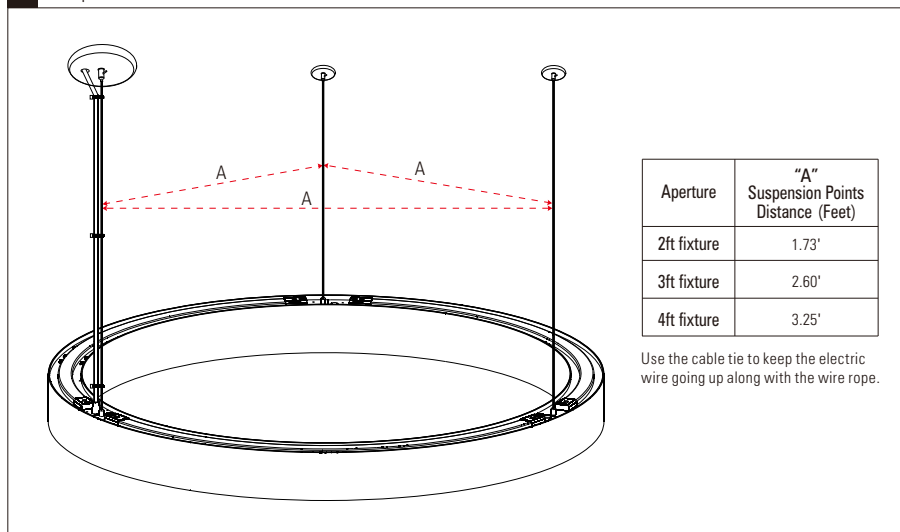




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

PENDANT-CENTRAL CANOPY CONVERGENCE DRY CEILING

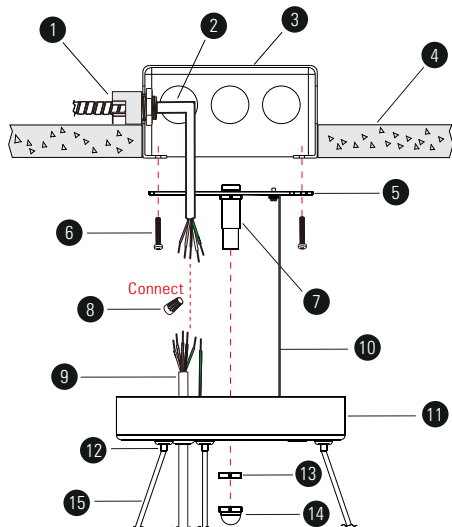


PARTS LIST

- 1 Armored Cable & Connector (By Others)
- 2 AC Input (By Others)
- 3 Junction Box (By Others)
- 4 Drywall Ceiling (By Others)
- 5 Junction Box Crossbar
- 6 Screw PM4*22
- 7 Cable Holder
- 8 Wire Nut
- 9 Power Cord
- 10 Safety Cable
- 11 5.8" Canopy Power Feed
- 12 Strain Relief Thread Nut
- 13 Hex Nut
- 14 Nut
- 15 Aircraft Cable

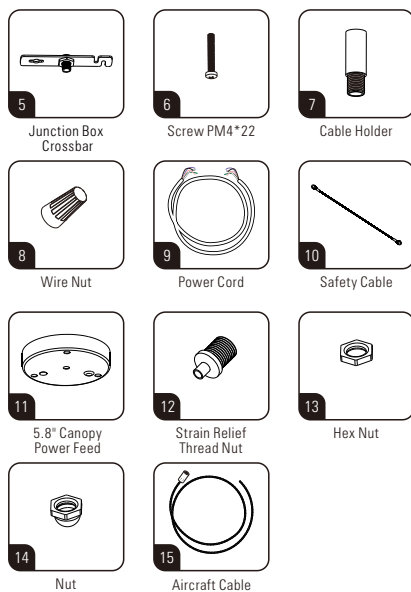


RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

PENDANT-CENTRAL CANOPY CONVERGENCE DROP CEILING

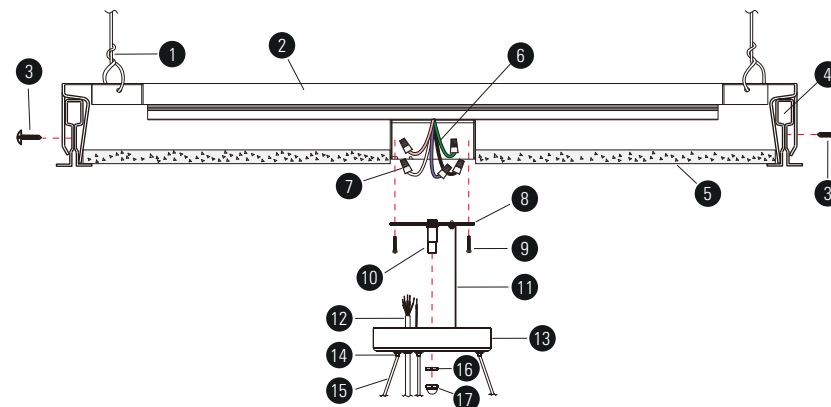

PARTS LIST

- 1 Support wire to structure (By Others)
- 2 T-Grid Hanger Power Feed
- 3 Screw PWB4*12
- 4 T-grid (By Others)
- 5 Ceiling Tile (By Others)
- 6 AC Input (By Others)
- 7 Wire Nut
- 8 Junction Box Crossbar
- 9 Screw PM4*22
- 10 Cable Holder
- 11 Safety cable
- 12 Power Cord
- 13 5.8" Canopy Power Feed
- 14 Strain Relief Thread Nut
- 15 Aircraft Cable
- 16 Hex Nut
- 17 Nut

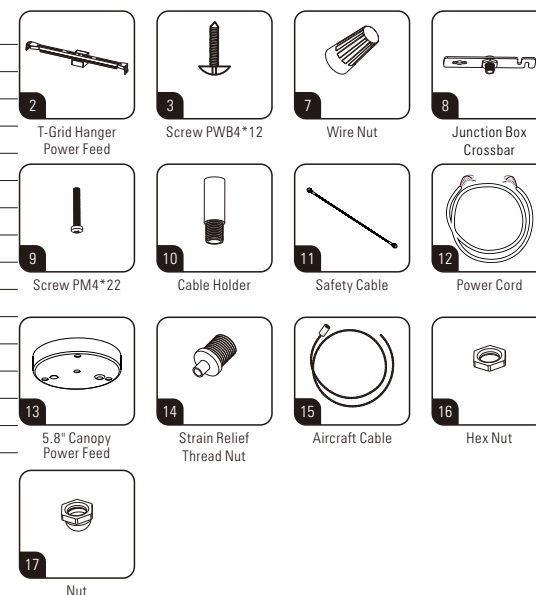





RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

PENDANT-CENTRAL CANOPY CONVERGENCE


1

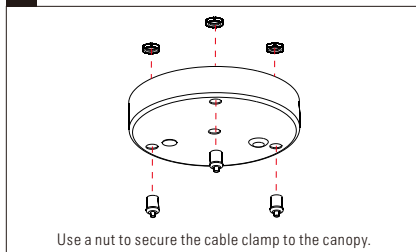


2

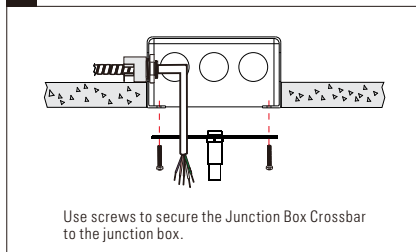


3

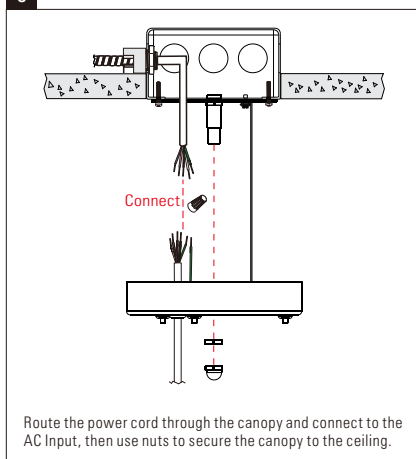

5 Complete

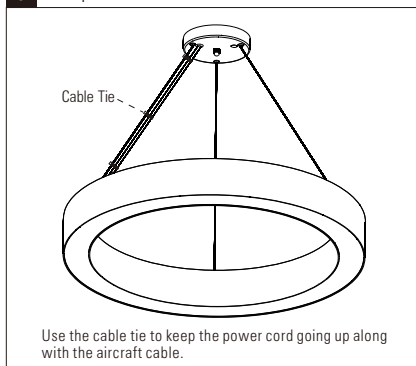

4

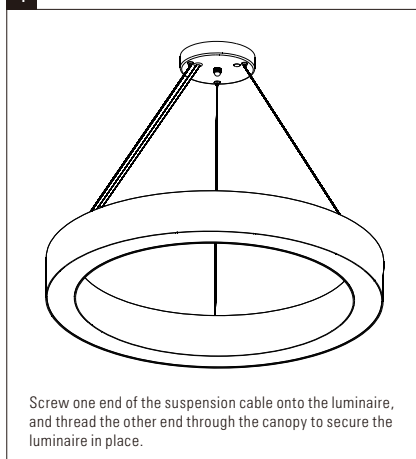


Note: Adjust the height of luminaire. Luminaire can be raised by pulling cable through the gripper and can be lowered by depressing the top cylinder on the gripper which pulls the luminaire down.




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

ACCESSORY

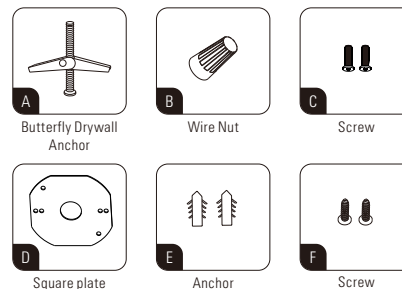


Noted: Square plate compatible for 4" octagon, 4" round, 4" square and 2x4" rectangle junction boxes.

2 Remove the PC cover

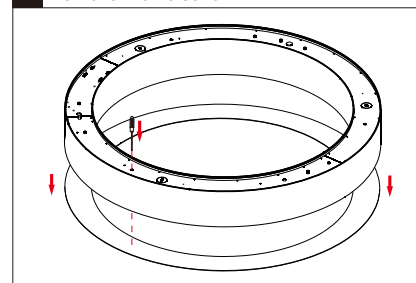


4 Screw the housing in the ceiling

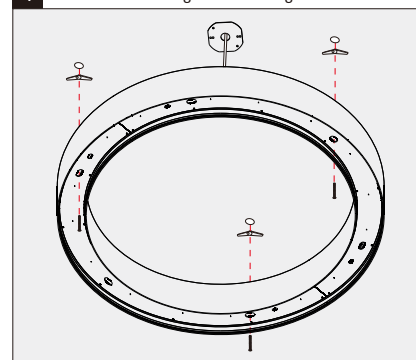


4: Fix the housing in the ceiling with butterfly drywall anchor "A".
Remark: Fix the housing with screws "F" if wooden frame ceiling.
Fix the housing with anchor "E" and Screws "F" if cement drywall.

1 Prepare mounting point in the ceiling

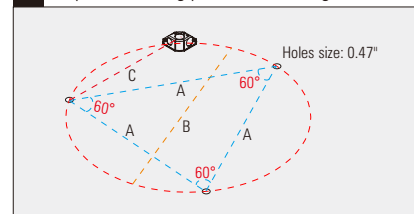

Aperture	A	B	C
	Feet	Feet	Feet
2ft fixture	1.73'	2.00'	1.17'
3ft fixture	2.60'	3.00'	1.36'
4ft fixture	3.25'	3.76'	1.56'

3 Mount plate and wiring

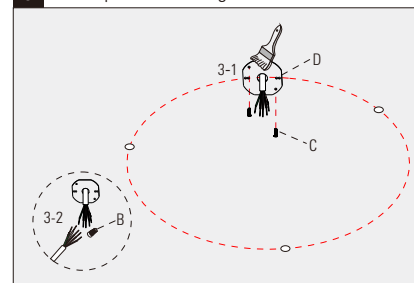

3-1: Cover the junction box with square plate "D" and fix it with screw "C", then plastering.
3-2: Then using the wire nut "B" to connect AC wires and dimming wires.
3-3: Hide all wires into the junction box.

5 Press the diffuser into housing

