


! RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

The product styles you received


First style: finished product with power cord

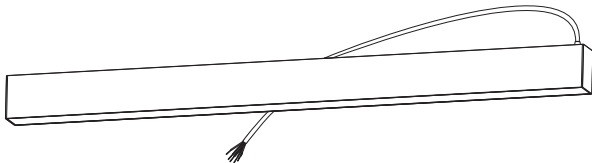

Second style: finished product with separate power cord



① Finished product without power cord

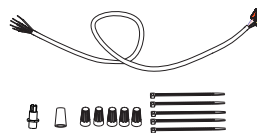

② Power cord kits

Third style: semi-finished product




① Housing




② Down led module



③ End caps

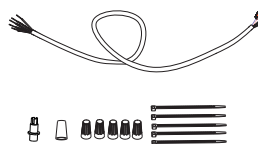

④ Power cord kits

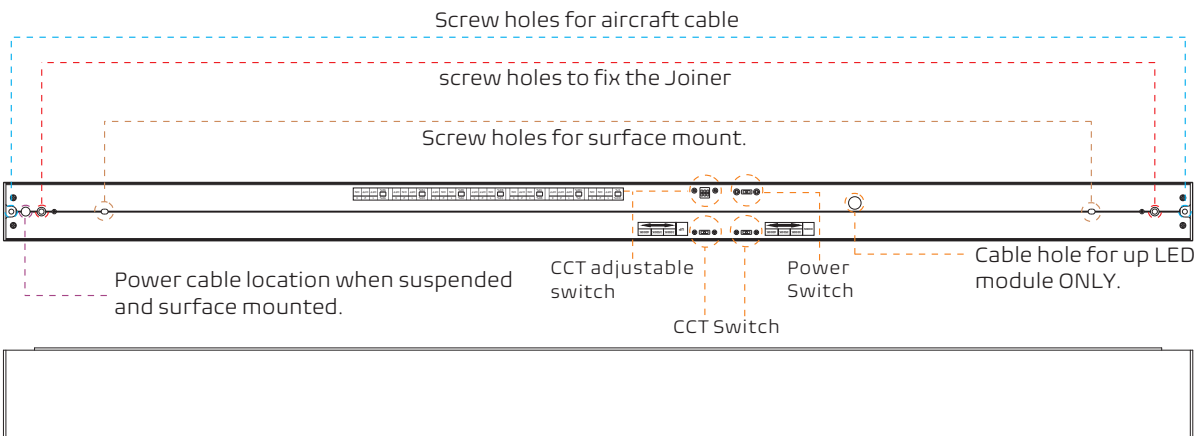


2.3" PENDANT LED


ARCHITECTURAL LED LUMINAIRE DROP CEILING

! RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

POWER FEED





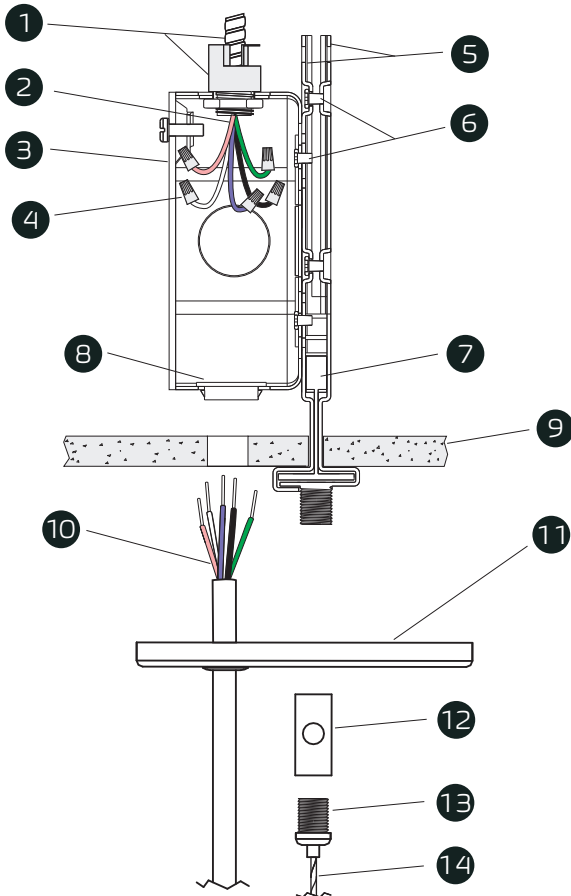


NON POWER SUSPENSION

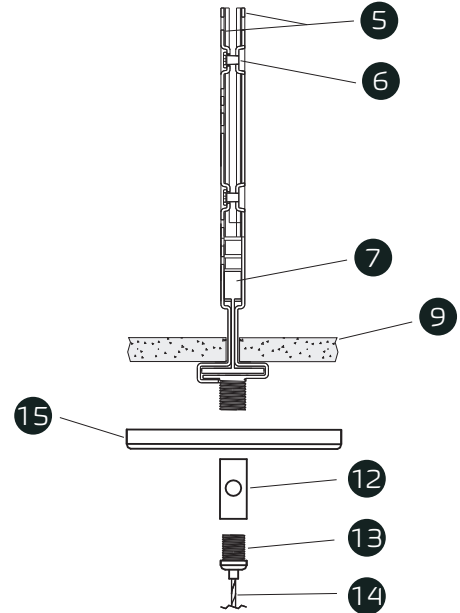

PARTS LIST

- 1 Armored Cable & Connector (By Others)
- 2 Branch Conductors (By Others)
- 3 4" Octagon Junction Box
- 4 Wire Nut
- 5 Assembled T-grid Clips
- 6 Screw 6#*4
- 7 T-grid (By Others)
- 8 Listed Cord Bushing (By Others) suitable for the cord size and the outlet box opening.
- 9 Ceiling Tile (By Others)
- 10 Power Cord
- 11 4" Canopy Power Kit
- 12 Cable Holder
- 13 Strain Relief Thread Nut
- 14 Aircraft Cable
- 15 2" Canopy

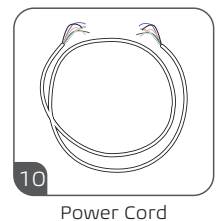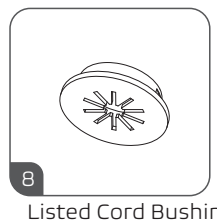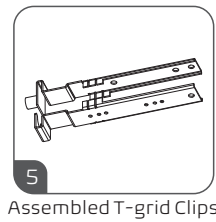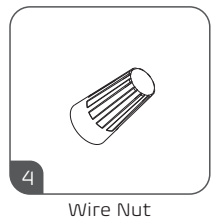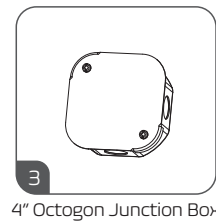


2.3" PENDANT LED


ARCHITECTURAL LED LUMINAIRE DRY CEILING

! RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

POWER FEED

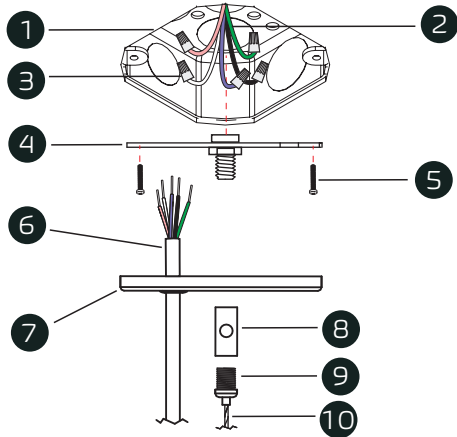


NON POWER SUSPENSION

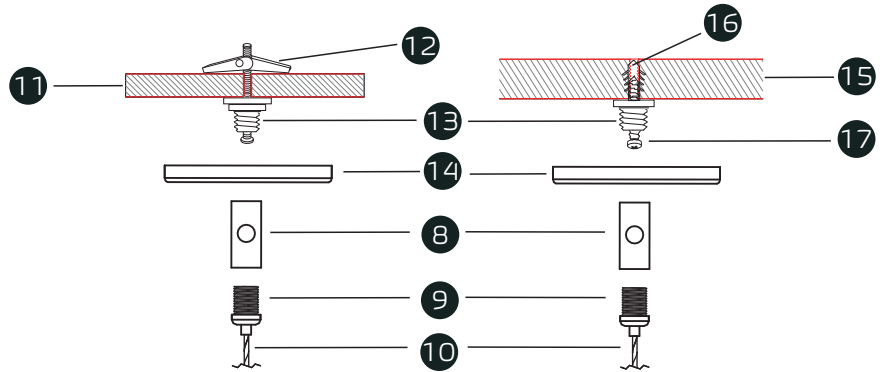


PARTS LIST


- 1 4" Octagon Junction Box (By Others)
- 2 Power Cord (By Others)
- 3 Wire Nut
- 4 Junction Box Crossbar
- 5 Screw PM4*22
- 6 Power Cord
- 7 4" Power Canopy Kit
- 8 Cable Holder
- 9 Strain Relief Thread Nut
- 10 Aircraft Cable
- 11 Drywall Ceiling (By Others)
- 12 Butterfly Drywall Anchor
- 13 Crimp Stud
- 14 2" Canopy
- 15 Solid Ceiling (By Others)
- 16 Anchor
- 17 Screw PA4*30

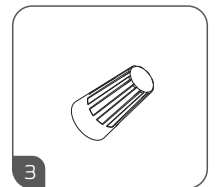


Wire Nut

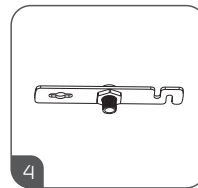


Junction Box Crossbar

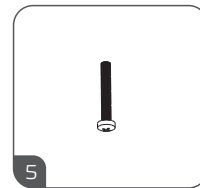


Screw PM4*22

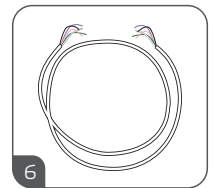


Power Cord

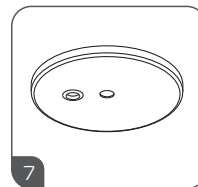


4" Canopy Power Kit

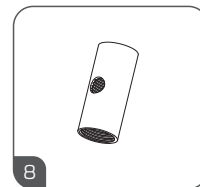


Cable Holder

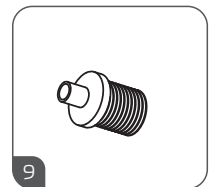


Strain Relief Thread Nut

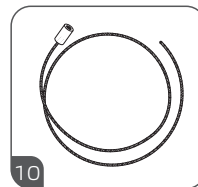


Aircraft Cable

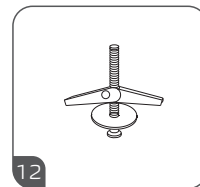


Butterfly Drywall Anchor

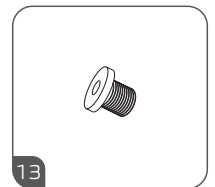


Crimp Stud

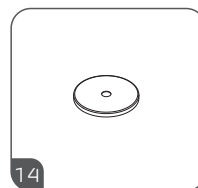

2" Canopy

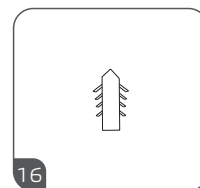

Anchor

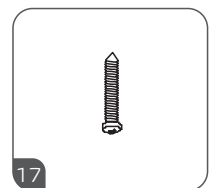

Screw PA4*30

2.3" PENDANT LED

ARCHITECTURAL LED LUMINAIRE INDEPENDENT INSTALLATION

⚠️ RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


IMPORTANT

1. Read all instructions.
2. Install in accordance with national and local electrical code regulations.
3. This product is intended to be installed and serviced by a qualified, licensed electrician.
4. Do not install in wet locations. For dry and damp use only.
5. Turn off electrical power before installing or servicing fixture in any way.
6. To reduce the risk of fire and overheating, make sure all connections are tight.
7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.
8. The maximum connection of each input line is 40FT(1200CM) in 120AC, 80FT(2400CM) in 230AC, 100FT(3000CM) in 277AC.

SHOCK HAZARD




May result in serious injury or death.
Turn power OFF at circuit breaker prior to installation or servicing.

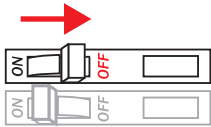


PRE-INSTALLATION


Assemble Power Cord

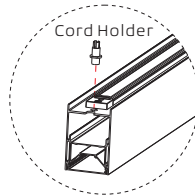


1. Take off the end cap, insert the cord holder into the power cord location as shown.

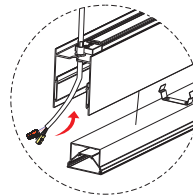

2. Take off LED modular, thread the power cord into the cord holder as shown.

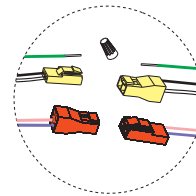


3. Wiring
Must connect connectors with corresponding colors as shown.
(The green ground wire is connected with a wire nut. Insert the yellow male and female to connect the black and white AC wire. Insert the orange male female to connect the purple, pink dimming wires.)

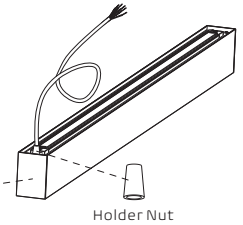

4. Fix the power cord with holder nut, remount LED modular and end cap.

INDEPENDENT INSTALLATION


1 Hang Luminaire

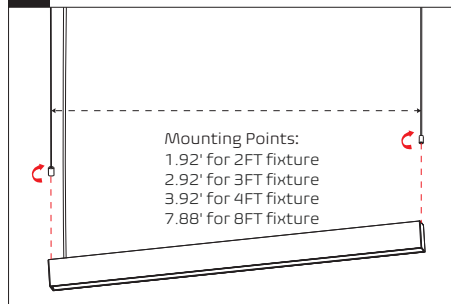

Screw both bottom parts of aircraft cables clockwise and secure them on the top of housing making sure they hang the lights.

Note: Adjust the height of luminaire. Luminaire can be raised by pulling cable through the gripper and can be lowered by depressing the top cylinder on the gripper which pulls the luminaire down.

2 Complete

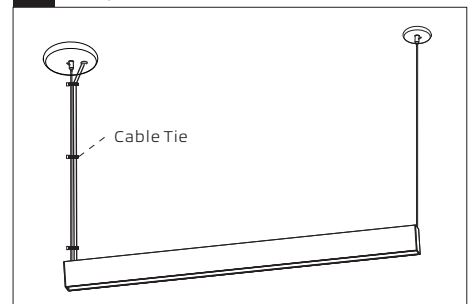

Use the cable tie to keep the electric wire going up along with the wire rope.

WIRING

CORD / SUPPLY WIRING	LUMINAIRE	
	LINE	LINE - BLACK
	GREEN	GROUND - GREEN
	NEUTRAL	NEUTRAL - WHITE
	DIM (+) VIOLET	VIOLET
	DIM (-) PINK	PINK




Please isolate two dimming wires by P2 terminal individually if no need dimming;
MUST connect wires with corresponding colors as shown.

2.3" PENDANT LED

ARCHITECTURAL LED LUMINAIRE MULTIPLE LUMINAIRES CONNECTION

⚠ RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


JOINER OPTIONS

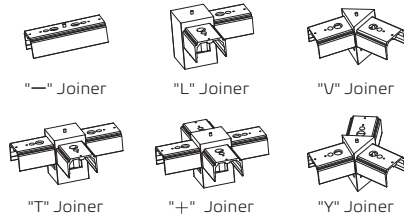


Note: It needs 2 inputs if using joiner "T", "+ " and "Y".

LINE CONNECTION

1 Install joiners

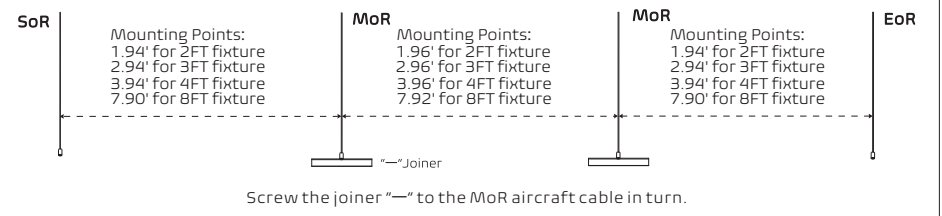


2 Hang luminaire and wiring - SoR

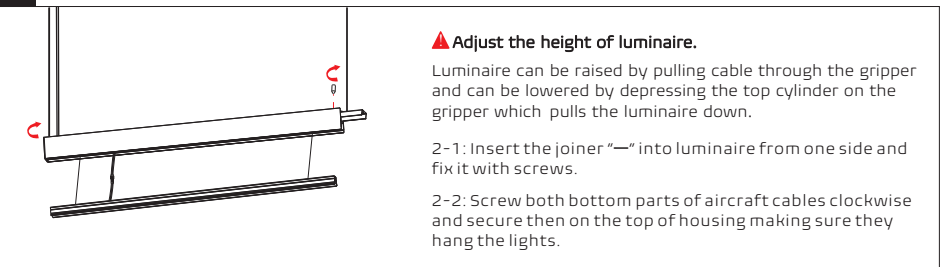


BEFORE CONNECTING

Disassemble Luminaires

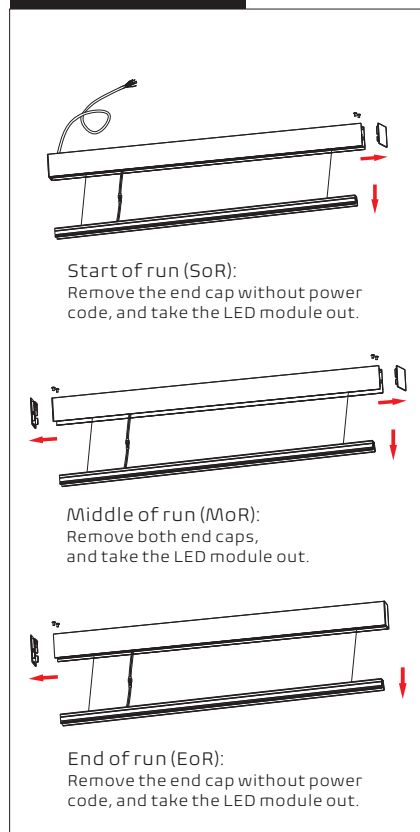


3 Repeat Hang and join steps - MoR to EoR

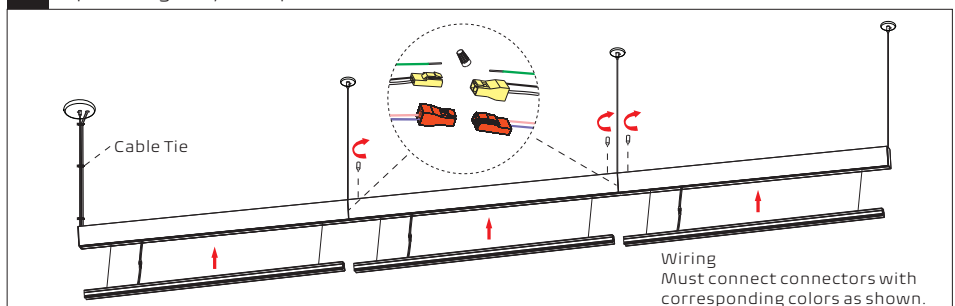


- 3-1: Zip tight power cord & aircraft suspension cable with the cable tie every 7.5cm.
3-2: Connect the quick connectors properly.
3-3: Insert all the LED Modules into the housing from SoR to EoR in turn.

4 Complete

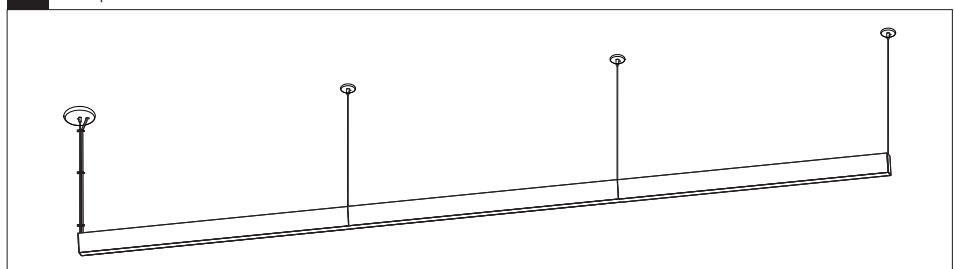

Optional 42' Continuous Roll-out Lens

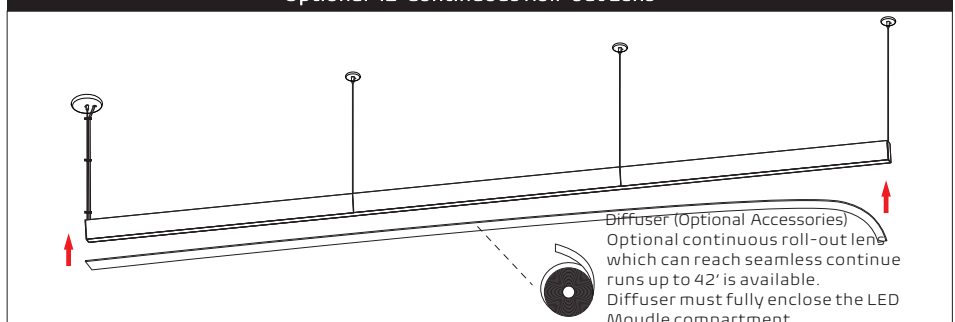


⚠ RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


L SHAPE CONNECTION

- ▲ For "T", "+", "Y", "V" shape or other geometric shapes, all subject to the "L" shape installation
- ▲ It needs 2 inputs if using joiner "T", "+" and "Y".

1 Install joiners

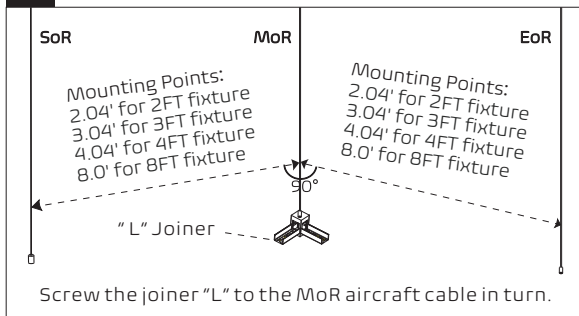

2 Hang luminaires and join

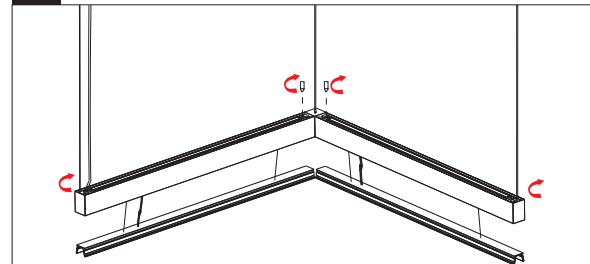


▲ Adjust the height of luminaire.

Luminaire can be raised by pulling cable through the gripper and can be lowered by depressing the top cylinder on the gripper which pulls the luminaire down.

2-1: Insert the joiner "L" into luminaire from one side and fix it with screws.

2-2: Screw both bottom parts of aircraft cables clockwise and secure then on the top of housing making sure they hang the lights.

3 Connect

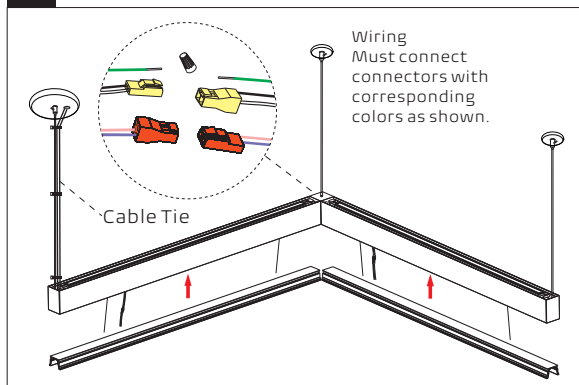

3-1: Zip tight power cord & aircraft suspension cable with the cable tie.

3-2: Connect the quick connectors properly.

3-3: Insert all the LED Modules into the housing from SoR to EoR in turn.

4 Complete

